


Usage instructions

1

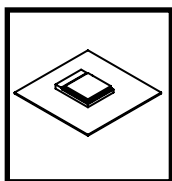

Clean off any residual traces of thermal paste on the CPU.

2



Press a small drop (4-5mm diameter) of NT-H1 onto the centre of the heat-spreader.

3



Put the heatsink onto the CPU, turn it back and forth a few times in order to spread the paste and then fasten it.

4



Done!

Warning

- *Do not ingest. Seek medical advice immediately if ingested.*
- *Keep away from children and pets.*
- *Avoid skin or eye contact.*

